



ergorest

# replacement parts

EN

**BE RELIEVED.**

## ERGOREST REPLACEMENT PARTS



**3500**

Mouse platform  
with normal clamp  
15-43 mm, black  
Black clamp: 3520



**3501**

Mouse platform  
with long clamp  
34-64 mm, black  
Black clamp: 3521



**35003**

Mouse platform  
with normal clamp  
15-43 mm, blue  
Black clamp: 35203



**35013**

Mouse platform  
with long clamp  
34-64 mm, blue  
Black clamp: 35213



**35004**

Mouse platform  
with normal clamp  
15-43 mm, red  
Black clamp: 35204



**35014**

Mouse platform  
with long clamp  
34-64 mm, red  
Black clamp: 35214



**35005**

Mouse platform  
with normal clamp  
15-43 mm, green  
Black clamp: 35205



**35015**

Mouse platform  
with long clamp  
34-64 mm, green  
Black clamp: 3521



**3530**

Mouse pad, black



**35303**

Mouse pad, blue



**35304**

Mouse pad, red



**35305**

Mouse pad, green



**3531**

Plastic base for  
Mouse pad



**3014**

Upholstered  
Support pad  
130 mm, grey



**30146**

Upholstered  
Support pad  
130 mm, brown



**30185**

Upholstered  
Support pad  
200 mm, green



**30142**

Upholstered  
Support pad  
130 mm, black



**3018**

Upholstered  
Support pad  
200 mm, grey



**30186**

Upholstered  
Support pad  
200 mm, brown



**30143**

Upholstered  
Support pad 130  
mm, blue



**30182**

Upholstered  
Support pad  
200 mm, black



**3084**

Upholstered  
Support pad  
130 mm ESD, black



**30144**

Upholstered  
Support pad  
130 mm, red



**30183**

Upholstered  
Support pad  
200 mm, blue



**30145**

Upholstered  
Support pad  
130 mm, green



**30184**

Upholstered  
Support pad  
200 mm, red



**3171**  
Upper clamp  
15-43 mm



**3271**  
Upper clamp  
15-43 mm, black



**3372**  
Anti-skid sticker



**3173**  
Upper clamp  
34-64 mm



**3273**  
Upper clamp  
34-64 mm, black



**3015**  
Finger screw for  
height adjustment



**3175**  
Upper clamp with  
Mouse bracket  
15-43 mm



**3275**  
Upper clamp with  
Mouse bracket  
15-43 mm, black



**3231**  
Attaching screw to  
the clamp



**3177**  
Upper clamp with  
Mouse bracket  
34-64 mm



**3277**  
Upper clamp with  
Mouse bracket  
34-64 mm, black



**3016**  
Strainer to  
the clamp



**3410**  
Extension part  
100 mm



**3003\***  
Plastic support pad  
130 mm



**3422**  
Locking system for  
extension, 3421 + 3016



**3420**  
Extension part  
200 mm




**3007\***  
Plastic support pad  
200 mm




**\***  
Metal washers for  
support pad included

## How to replace leather pad

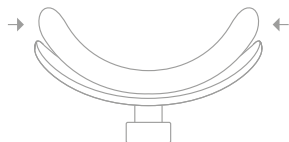


1

Remove the old leather pad by squeezing in the edges...

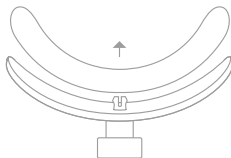

2


...and lifting it up until the pins unlock from the bottom of the cup.

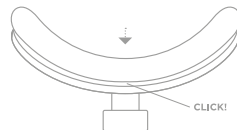

3


Snap the new leather pad to its place by pressing it hard.

## How to replace support cup

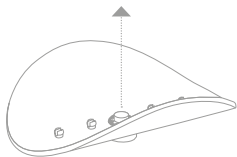


1

Remove small metal washer carefully using, for example, screw driver. After it's off cup gets off easily.

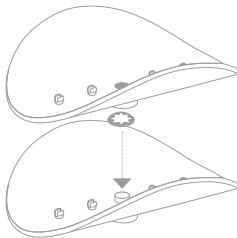

2

Place the new cup and the new metal washer to the plug. Use the old cup to push the washer to its place.

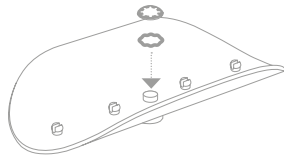

3

For extended cup, place wave washer under metal washer.

# Get in touch

Ergorest Oy  
Yrittäjätie 1, 71800 Siilinjärvi, Finland  
info@ergorest.fi  
tel. +358 20 740 1470  
fax +358 17 462 6195



**BE RELIEVED.**

ergorest.fi



ergorest